

PARTS LIST

BC4320H-RS/(1P)

CONTENTS

1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 12
5. ACCESSORIES	13 ~ 14


2016. 10.



MARUYAMA


P/N 523498-6

1. BC4320H-RS/(1P)
MAIN BODY

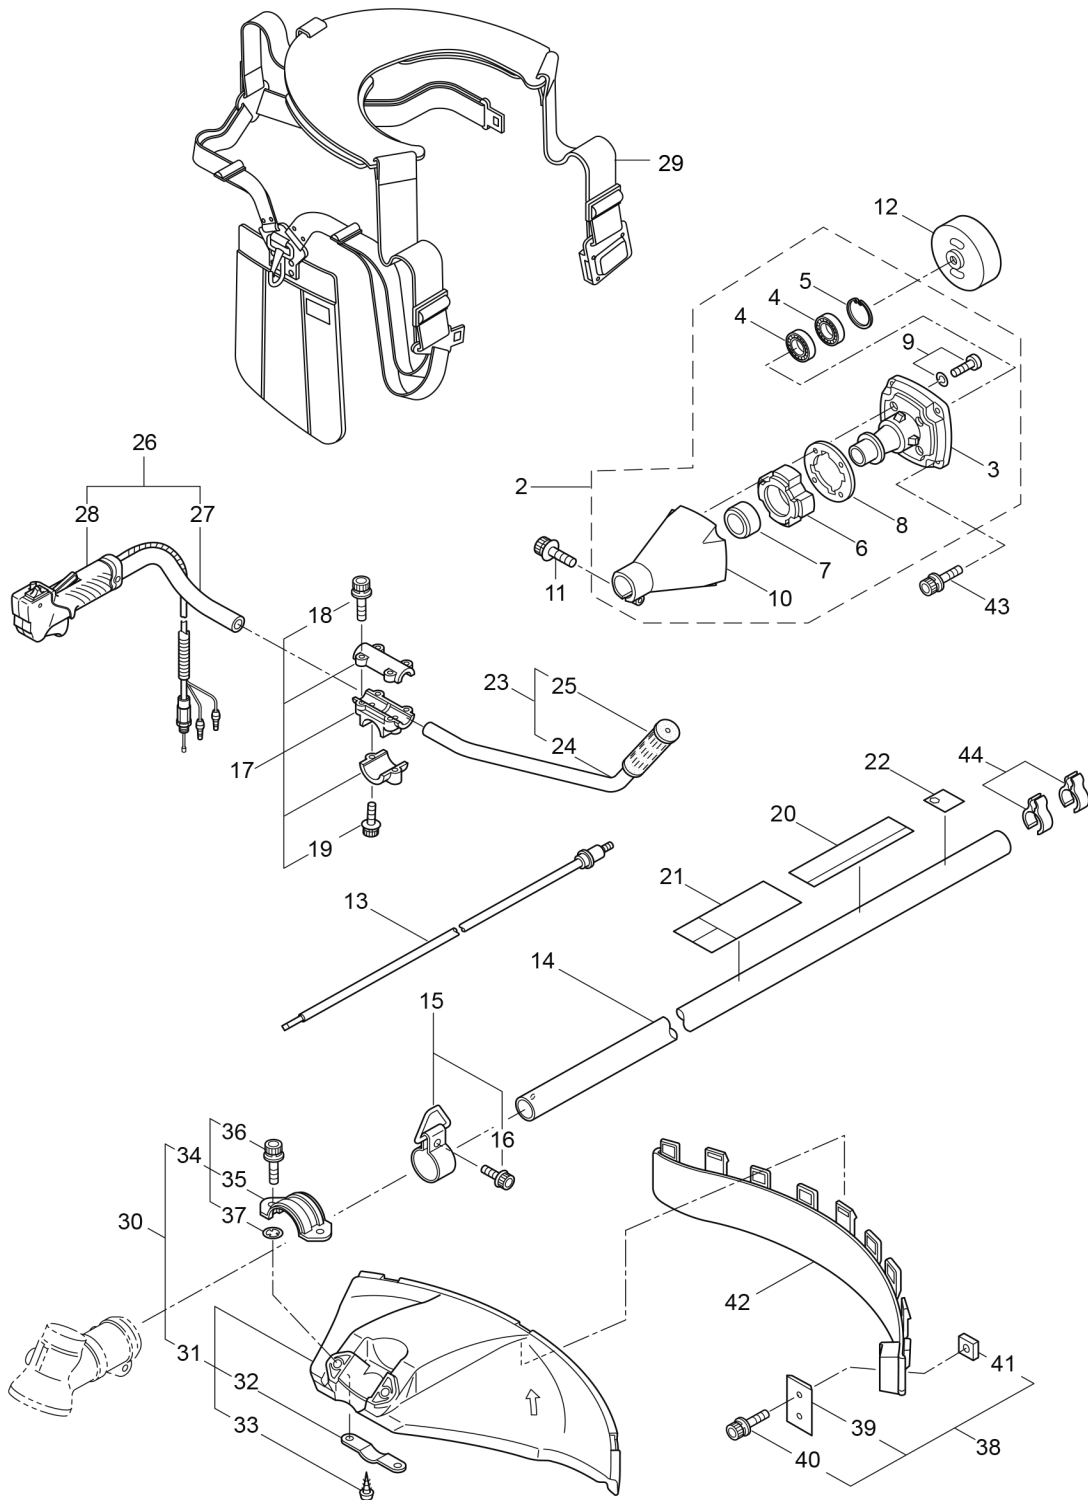


Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
	1	364468	BC4320H-RS(EU01 1P)	1				
	2	234162	CLUTCH CASE ASSY	1		B43/B50R(MUS)	Incl.3-10	
	3	234143	CASE BEARING	1				
	4	140474	BEARING 6202 ZZ	2		#6202ZZ	#6202ZZ	
	5	012380	SNAP RING	1		アサリ35	#35	
	6	217045	BUFFER	1				
	7	217046	BUFFER	1				
	8	217047	WASHER	1		ワッシャー74		
	9	092033	SCREW	4	10	M5X15	M5x15	
	10	227728	OUTER TUBE ADAPTER	1				
	11	217134	BOLT	1		M6X30	M6x30	
	12	211203	CLUTCH DRUM	1		78XM8		
	13	217897	DRIVE SHAFT	1				
	14	217900	OUTER PIPE	1		28XT1.6X1450L		
	15	231887	HANGING BRACKET ASSY	1		(28)アサリホルト	Incl.16	
	16	261762	SCREW	1		M5X14	M5x14	
	17	231888	HANDLE BRACKET	1		ワッシャー28	Incl.18,19	
	18	217138	BOLT	4		M6X25	M6x25	
	19	217134	BOLT	2		M6X30	M6x30	
	20	228333	LABEL	1		BC4320H-RS	BC4320H-RS	
	21	223188	CAUTION MARK	1		CEマーク		
	22	228207	LABEL	1		115DBA		
	23	228398	HANDLE A ASSY	1		EOタイア/アルミハンドル	Incl.24,25	
	24	228399	HANDLE	1		(19)XT2.0 EO		
	25	226512	GRIP	1		(19)グリップ		
	26	229762	HANDLE ASSY-LEFT	1		EOタイア/アルミハンドル	Incl.27,28	
	27	228401	HANDLE	1		(19)スリット/アサリ EO		
	28	229763	Throttle Lever Assy (229763)	1				
	29	228086	NEW LARK SHOULDER HARNESS	1				
	30	232092	SAFETY COVER	1		テッパケンのCEア 42	Incl.31-37	
	31	231262	SAFETY COVER	1		テッパケンのCEア 42	Incl.32,33	
	32	237364	THREADED BRACKET	1		42 ヨウ		
	33	221580	SCREW	1	10	トラス 2.5x1 ヨビ 4X8	4x8	
	34	232093	BRACKET	1		カインレタイア	Incl.35-37	
	35	223179	BRACKET	1				
	36	220632	CAP SCREW	2		M6X30	M6x30	
	37	231704	WASHER	2		6X13XT1.0 アサリ ワッシャー	6x13xt1.0	
	38	231882	CUTTER ASSY	1		リョウバ/フラット	Incl.39-41	
	39	230747	CORD CUTTER	1		リョウバ/フラット		
	40	261250	CAP SCREW	1	5	M5X20	M5x20	
	41	228325	SQUARE NUT	1		M5		
	42	230748	EXTENSION	1		ワンタッチ アカ/リア ナシ		
	43	219113	CAP SCREW	4		M6X20	M6x20	
	44	219161	WIRE GUIDE	2				

2. BC4320H-RS/(1P)
GEARCASE

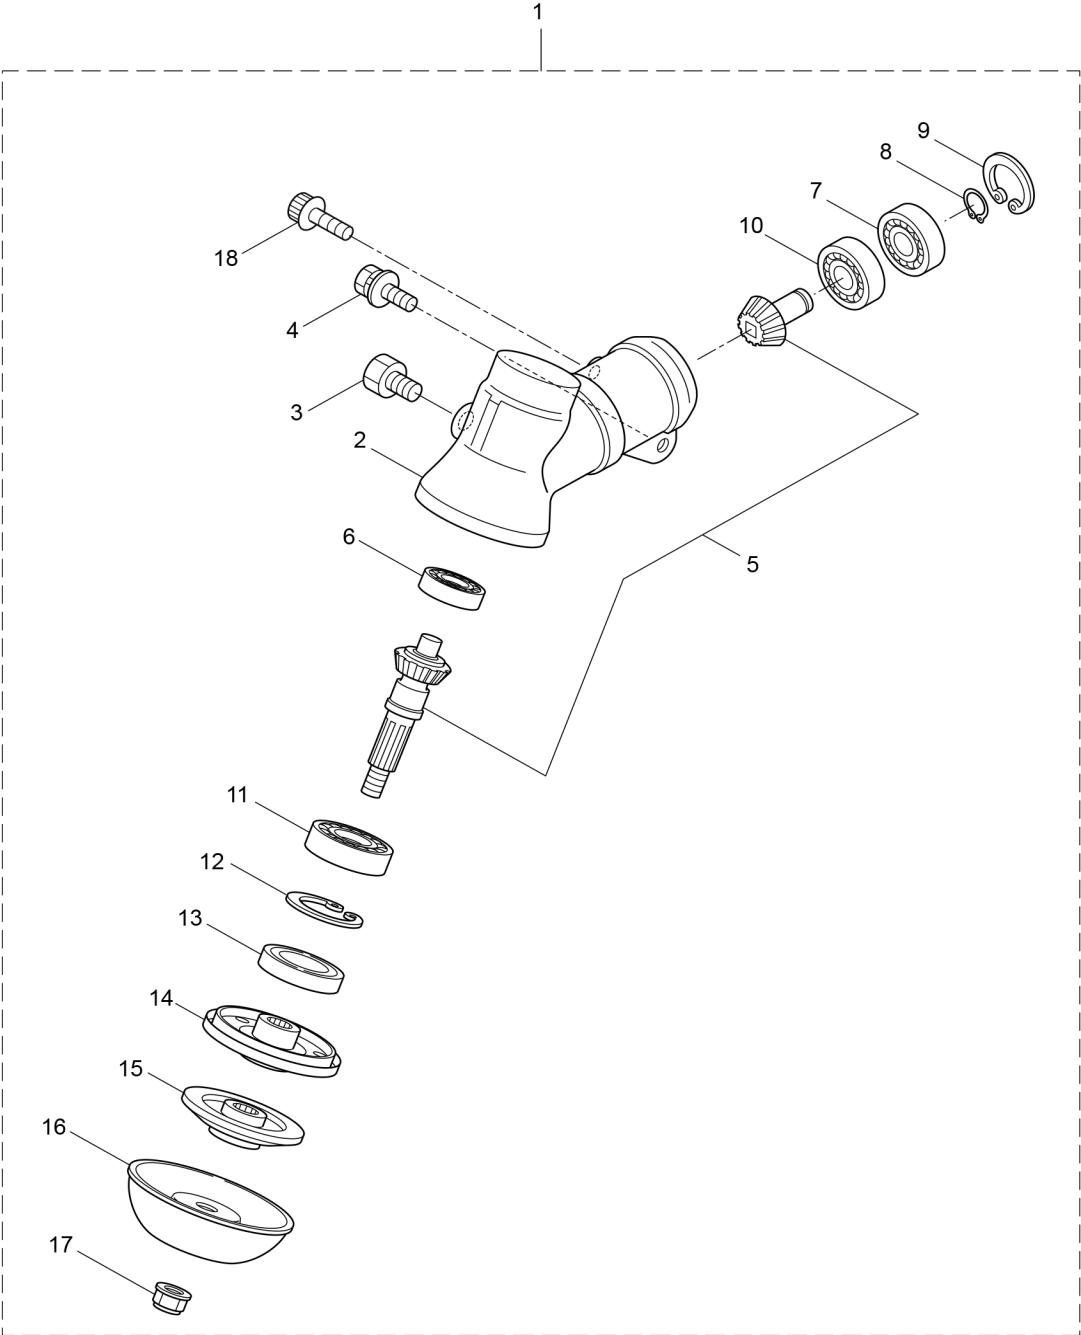

Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
	1	234835	GEAR CASE	1		M10ネジ/6かアナキ	Incl.2-18	
	2	232833	GEAR CASE	1		キヨカカタ/28		
	3	234109	BOLT	1	5	M8X8	M8x8	
	4	217134	BOLT	1		M6X30	M6x30	
	5	234349	GEAR SET	1		55°/06.1 14:19		
	6	014490	BEARING 6000	1		#6000	#6000	
	7	106933	BEARING 6000Z	1		#6000Z	#6000Z	
	8	014210	SNAP RING	1	5	ｼﾞｸヨ710	#10	
	9	054676	RING SNAP	1	5	ｱナヨ726	#26	
	10	014490	BEARING 6000	1		#6000	#6000	
	11	012544	BEARING	1		#6202	#6202	
	12	012380	SNAP RING	1		ｱナヨ735	#35	
	13	232049	OIL SEAL	1		D21355	D21355	
	14	232322	BRACKET A	1				
	15	232052	BRACKET B	1				
	16	230849	NUT COVER	1		T1.5		
	17	232920	NUT	1		M10X1.25 ヒタリ	M10x1.25	
	18	217135	BOLT	1		M6X10	M6x10	


3. BC4320H-RS/(1P)
ENGINE

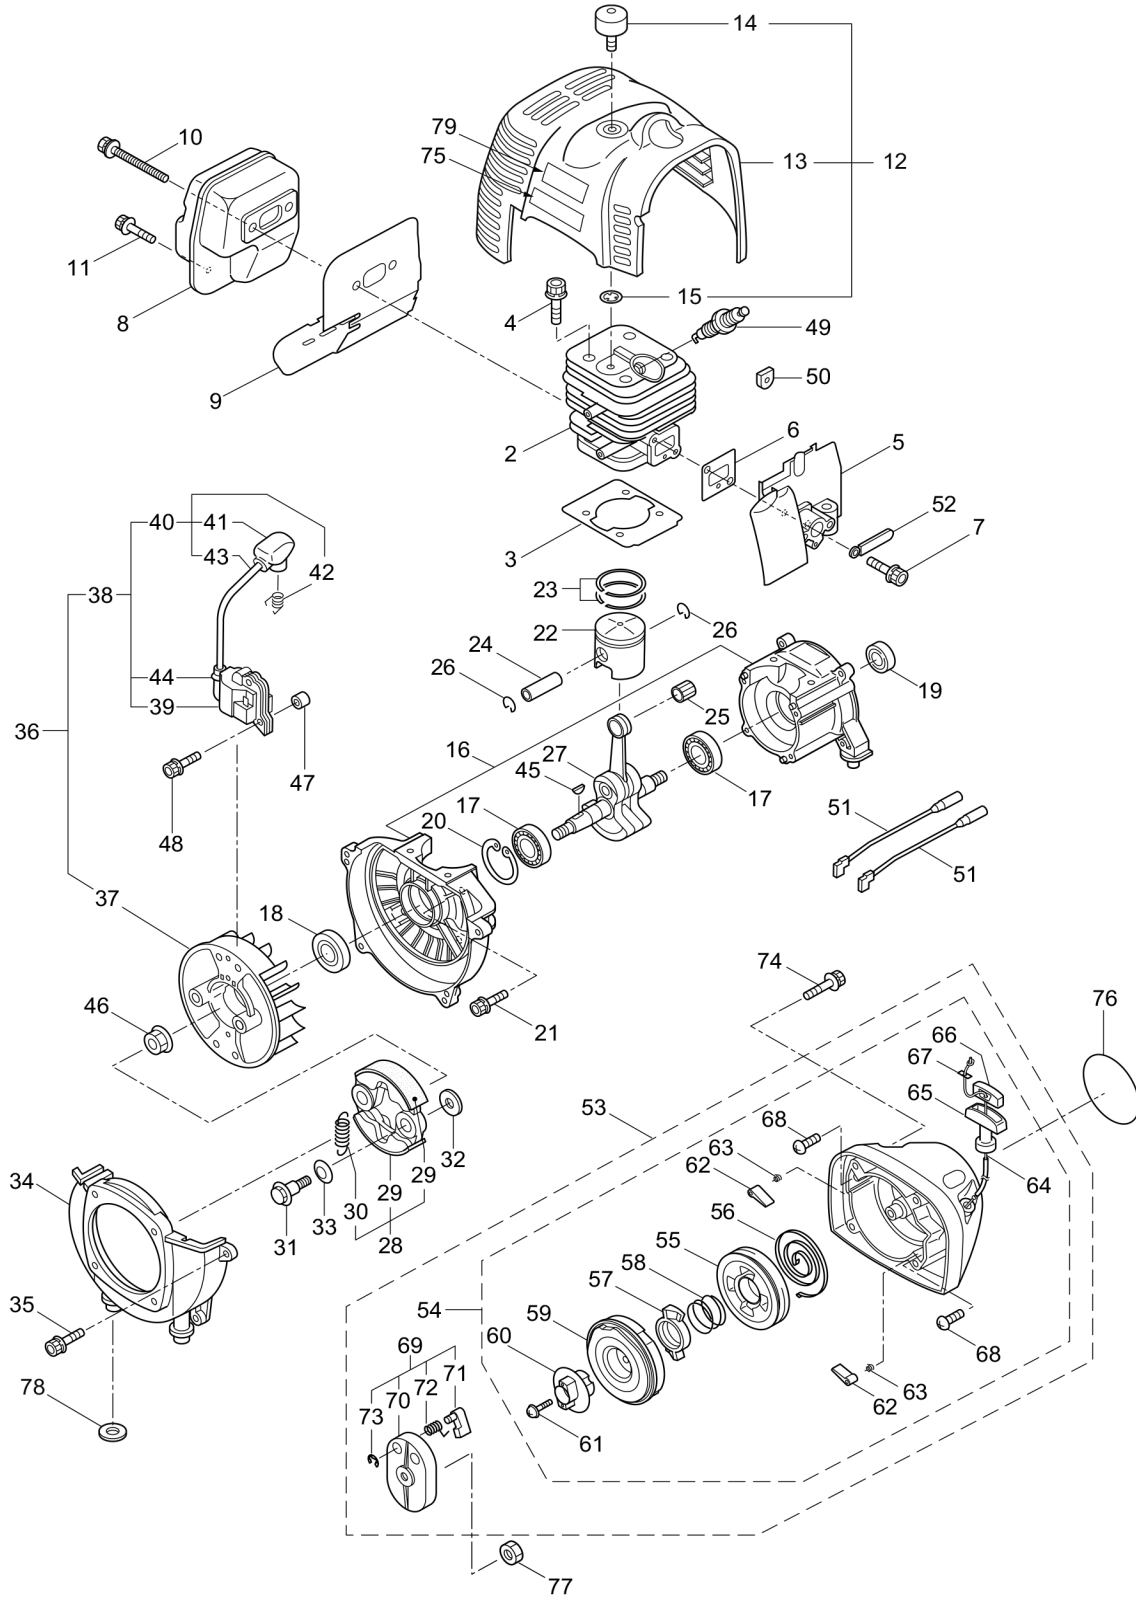

Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
	1	858297	NE420	1		CE	NE420/13	
	2	282257	CYLINDER	1		NE420	New gasket required	
	3	282259	GASKET	1	5			
	4	261612	CAP SCREW	4		M5X30	M5x30	
	5	282261	INSULATOR	1		NE420	New gasket required	
	6	282262	GASKET	1				
	7	267290	CAP SCREW	2	5	M5X20WSW+ネ	M5x20	
	8	282264	MUFFLER	1		NE420		
	9	282271	GASKET	1				
	10	266713	CAP SCREW	2		M5X60ワッパ	M5x60	
	11	283315	CAP SCREW	1		M5X12W-12	M5x12W-12	
	12	286390	TOP COVER ASSY	1			Incl.13-15	
	13	282274	TOP COVER	1		ワカ		
	14	285843	KNOB BOLT	1				
	15	286362	WASHER	1	5	M6	M6	
	16	282277	CRANKCASE	1				
	17	262658	BEARING 6202 C3	2		6202C3**	#6202C3	
	18	262660	OIL SEAL	1		AE0610-E0 (NOK)	TC15357	
	19	262565	OIL SEAL	1		ISCD15257	ISCD15257	
	20	012380	SNAP RING	1		ワッパ35	#35	
	21	261612	CAP SCREW	4		M5X30	M5x30	
	22	281299	PISTON	1				
	23	262476	PISTON RING	2			(2)Required	
	24	262749	PISTON PIN	1		7.5X11X33.5		
	25	262659	NEEDLE BEARING KTV111414EGX01B	1		KTV111414EG01B2	KTV111414EG01B2	
	26	262479	CLIP PISTON	2				
	27	283038	SHAFT COMPLETE	1		NE420		
	28	282743	CLUTCH ASSY	1		78 ワッパ	Incl.29,30	
	29	282624	CLUTCHSHOE	2			(2)required	
	30	263617	SPIRAL SPRING	1		2.3-44.8L	2.3-44.8L	
	31	282321	CLUTCH BOLT	2		M8X1.25	M8x1.25	
	32	262683	WASHER	2	5	8X22XT1.2	8x22xt1.2	
	33	262682	WAVE WASHER	2	5			
	34	282285	FAN COVER	1		NE420		
	35	261250	CAP SCREW	4	5	M5X20	M5x20	
	36	282287	ROTOR ASSY	1			Incl.37-44	
	37	282288	ROTOR	1				
	38	282289	IGNITION COIL ASSY	1		SHIC 110	Incl.39-44	
	39	267572	COIL	1		SHIC 110		
	40	282290	CORD ASSY	1			Incl.41-43	
	41	282292	PLUG CAP	1				
	42	261075	CONNECTOR	1		10805-40061		
	43	282291	CORD	1				
	44	261072	CAP	1		ワッパ 10855-40101		
	45	261076	WOODRUFF KEY 3X10	1	5	Aワ 3X10	3x10	
	46	262731	NUT	1		M10X17XT8ワ521	M10	
	47	280381	SPACER	2	5			
	48	261256	BOLT	2	5	M4X25	M4x25	
	49	262483	SPARK PLUG NGK BPMR6Y	1		NGK BPMR6Y	NGK BPMR6Y	
	50	281172	GROMMET	1		ワ(N1.5)		
	51	267492	LEAD	2		130L	130L	
	52	264588	CLAMP	1	5			
	53	282294	RECOIL STARTER ASSY	1			Incl.54-73	
	54	282295	RECOIL STARTER ASSY	1			Incl.55-68	
	55	280994	PULLEY	1				
	56	280995	SPIRAL SPRING	1				
	57	280996	PAWL	1				
	58	280997	RETURN SPRING	1				
	59	283123	SPRING COMPLETE	1		1.0X14X1000		
	60	280999	PLATE	1				
	61	281000	SET SCREW	1				
	62	281001	PULLEY	2				
	63	281002	RETURN SPRING	2				


Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
	64	281004	STARTER ROPE	1				
	65	262633	STARTER KNOB	1		㊦		
	66	262981	CAP	1		㊦		
	67	281005	ROPE STOPPER	1				
	68	282622	SCREW	2				
	69	282623	STARTER PULLEY ASSY	1			Incl.70-73	
	70	282282	STARTER PULLEY	1				
	71	262636	RATCHET	2				
	72	262637	RETURN SPRING	2				
	73	262638	E-RING	2				
	74	261607	CAP SCREW	4	5	M5X16WSW	M5x16	
	75	262714	LABEL	1		MARUYAMA	MARUYAMA	
	76	283135	LABEL	1		REVERSE2/NE420	REVERSE2/NE420	
	77	126990	NUT	1	5	M8 2 ¹ /1	M8	
	78	285735	RUBBER PACKING	4	5	17X8X2		
	79	265694	LABEL	1		CE7-7		

4. BC4320H-RS/(1P)
CARBURETOR, FUEL TANK

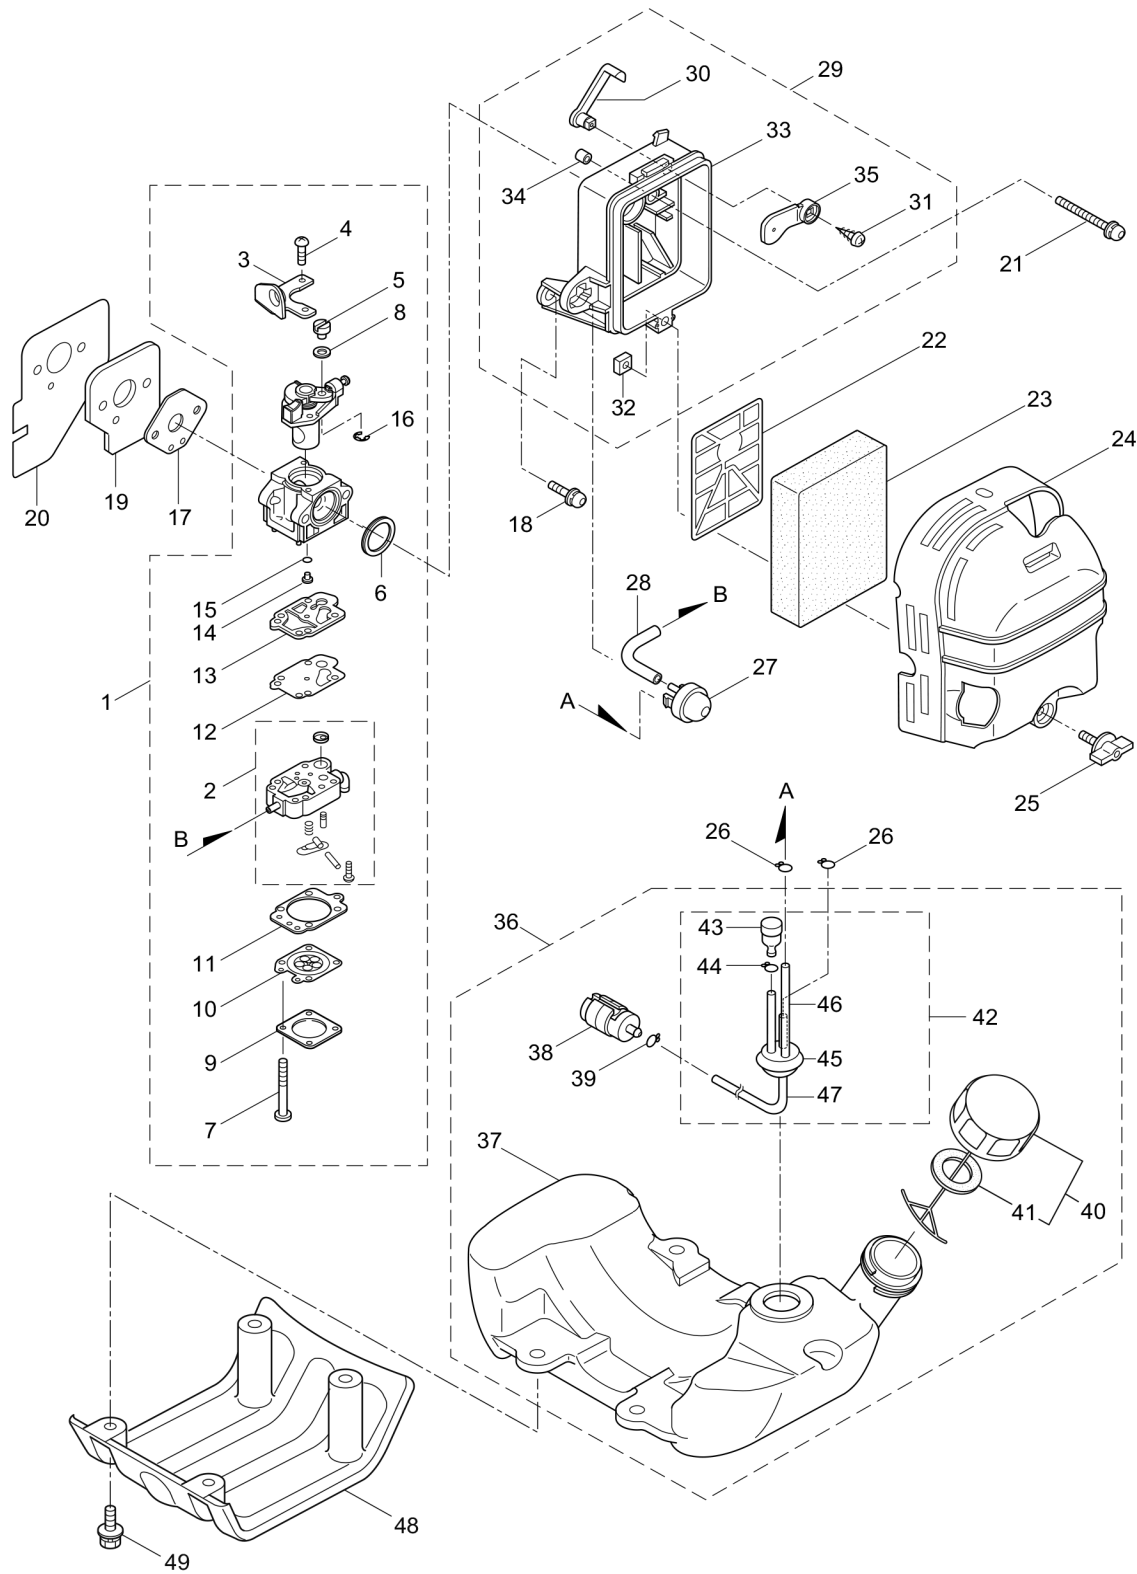

Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
×	1	284109	CARBURETOR ASSY	1		WYK-293	Incl.2-16 New gasket required	
	2	283124	CARBURETOR BODY	1		WB5-7437		
	3	264677	BRACKET	1		WB167-143		
	4	261875	SCREW	2		WB96-323		
	5	261658	SWIVEL	1		WB52-34		
	6	261657	PACKING	1		WB16-171		
	7	263737	SCREW	4		WB96-325		
	8	264678	WASHER	1	5	WB136-221		
	9	263726	COVER PLATE	1		WB21-158		
	10	283905	DIAPHRAGM METERRING	1		WB95-614		
	11	263727	GASKET	1		WB92-192		
	12	262994	DIAPHRAGM	1		WB95-99		
	13	282576	GASKET	1		WB92-415		
	14	283125	JET	1		WB112-3070-490		
	15	261871	O-RING	1		WB16-104		
	16	261876	RING	1		WB16-71		
	17	282301	GASKET	1				
	18	264807	CAP SCREW	1	5	M5X16WSWホ ^ホ	M5x16	
	19	283086	DIVIDER	1				
	20	283087	GASKET	1				
	21	262720	CAP SCREW	2	5	M5X55WSWホ ^ホ	M5x55	
	22	282481	PLATE	1				
	23	282306	ELEMENT	1				
	24	282307	CLEANER COVER	1		㊦		
	25	281438	KNOB	1				
	26	261117	CLIP	2				
	27	282299	PRIMER	1				
	28	282512	PIPE	1				
	29	282302	HOUSING ASSY	1			Incl.30-35	
	30	282305	LEVER	1				
	31	269032	SCREW	1	5	タビ ^ホ ンネジ ^ホ 3.5X8		
	32	269423	NUT	1	5	シカナツトM5		
	33	282303	HOUSING BODY	1				
	34	282484	SLEEVE	3				
	35	282304	MACHINED DISC	1				
	36	282309	TANK ASSY	1		A38B73C180D92	Incl.37-47	
	37	282310	FUEL TANK	1		チリ ^ホ ル		
	38	267328	FUEL FILTER ASSY	1		125-532		
	39	261117	CLIP	1				
	40	275306	FUEL TANK CAP ASSY	1			Incl.41	
	41	274875	PACKING	1		KRYNAC4975F		
	42	282312	PIPE ASSY	1			Incl.43-47	
	43	261590	BREATHER SUB ASSY	1				
	44	261117	CLIP	1				
	45	268065	GROMMET	1		37 ^ホ		
	46	282511	OVER FLOW PIPE	1				
	47	262649	FUEL PIPE	1		3X5X180L(㊦)		
	48	285757	STAND	1				
	49	281714	CAP SCREW	4		M5X20WSW-12	M5x20	

5. BC4320H-RS/(1P)
ACCESSORIES

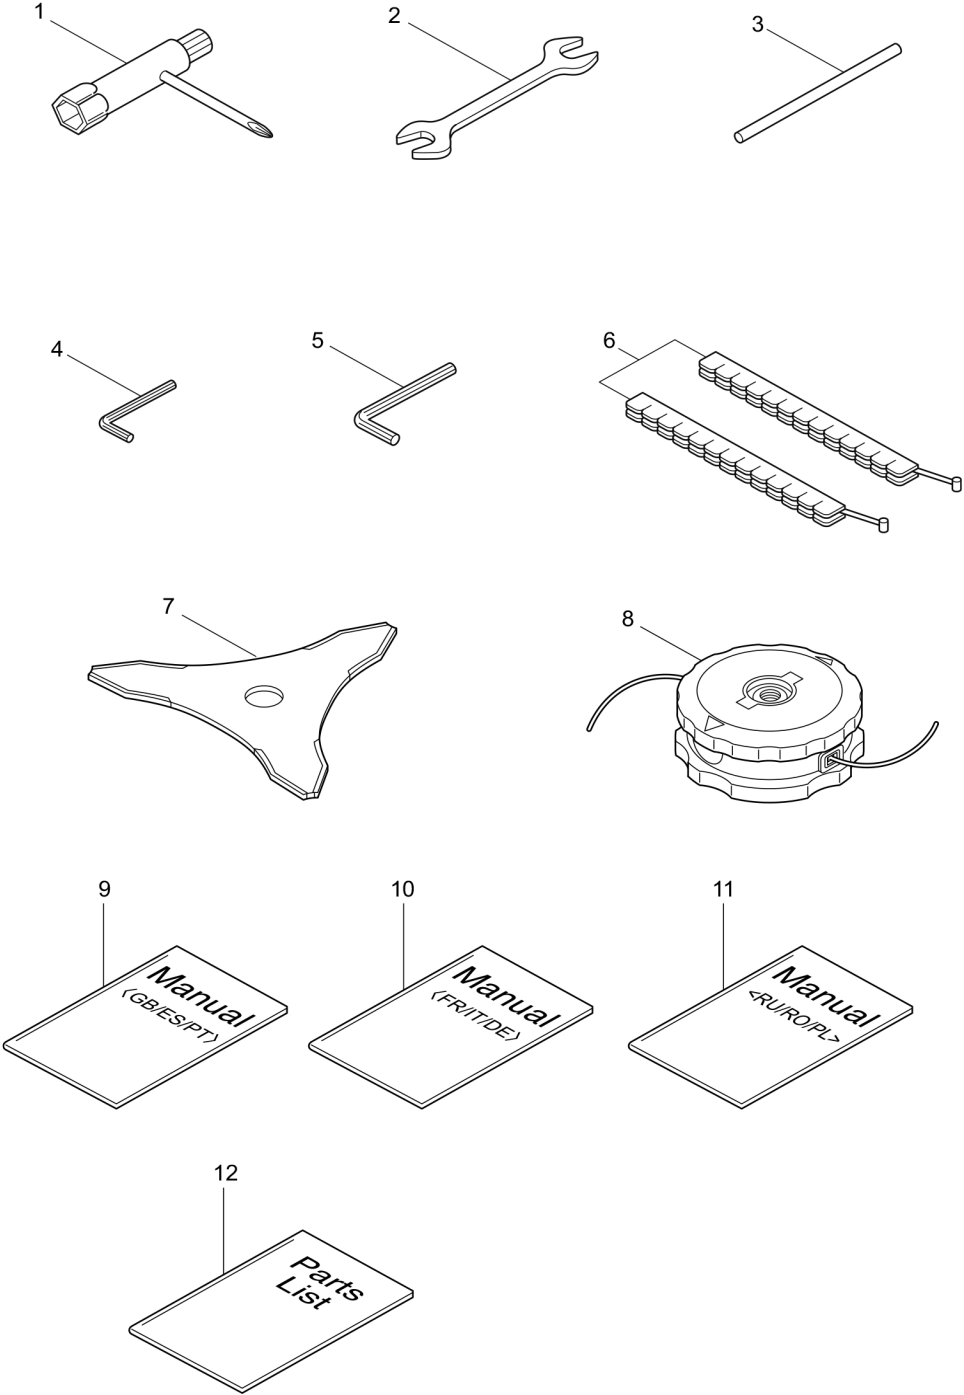

Status	Position	Parts Number	Parts Name	Unit Quantity	Set Unit Quantity	Specification	Remarks	Maker code
	1	228008	BOX SPANNER	1		17X19X(+) ^ト ラ ^イ ^ハ	17x19x(+)	
	2	054756	DOUBLE ENDED SPANNER	1		10X13	10x13	
	3	212300	LEVER HANDLE	1		6X100L	6X100L	
	4	219432	WRENCH	1		ニメ ^ン ハ ^ハ 4	4mm	
	5	219433	WRENCH	1		ニメ ^ン ハ ^ハ 5 ^エ コ ^コ	5mm	
	6	220534	BLADE COVER	1		ヒト ^ク ミ		
	7	227910	THREE TEETH BLADE	1		255X25.4XT3		
	8	234901	SEMI NYLON HEAD(L) 5INCH	1		ヒタ ^リ ム10 ^メ ネ ^シ 1 ^ラ ^イ ^ン		
	9	233234	MANUAL	1		3 ^カ ク ^ク GB/ES/PT	GB/ES/PT	
	10	233326	MANUAL	1		3 ^カ ク ^ク FR/IT/DE	FR/IT/DE	
	11	233336	INSTRUCTION MANUAL	1		3 ^カ ク ^ク RU/RO/PL	RU/RO/PL	
	12	523498	PARTS LIST	1		BC4320H- RS/EU01	BC4320H- RS/(1P)	